

NAYER KAZEMI - WATER ART

Saa-Deh #1001 ©2000

The name “Saa-Deh” in Persian means “Simplicity”. Indeed it is simple, yet the sound of the flowing water will help you feel relaxed and surrounded by nature.

Dimensions: 6.75” x 6.25” x 6.25”
Material: Stainless Steel
Available Finish: Matte Finish



Water Pump: See reverse side for detailed information.

Assembly Instructions:

- 1 - This water sculpture is pre-assembled and the pump is pre-adjusted.
- 2 - Fill the container between 3-4” with water, (distilled water is recommended).
- 3 - Place the rock on top of the ceramic plate just below the spout where the water flows out.
- 4 - Plug in the electrical cord, turn the switch on, and enjoy your “Water Art”

TO PREVENT PUMP FROM BURNING OUT KEEP WATER LEVEL ABOVE THE PUMP AT ALL TIMES.

Special Note:


Please keep the water level above the pump at all times. If water level is low the pump will not have enough pressure to push the water out of the spout, which can cause the water to travel under the spout and collect on the top of the stainless steel plate surface. The water may then drip over the outside of the bowl, causing leakage.

If the fountain is placed on a wood surface of any kind, please protect it with something like a piece of glass.

Recommended Care:

Change the water every 3-4 weeks. To clean water spots use soap & a soft sponge. The stainless is made from marine quality stainless steel (the same material is used for ships & kitchen appliances). However if you choose to use tap water & your water is hard, rust may develop inside of your piece. By using a Scotch Bright sponge and soap, you can gently scrub the rust out of the water sculpture. **DO NOT ADD VINEGAR OR BLEACH TO THE WATER** it will eat the impeller in the pump, which is made of plastic.

I hope you enjoy the peace and tranquility that your “Water Art” will bring to you.

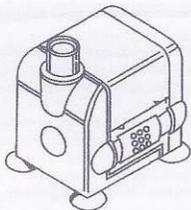

Alpine™ CORPORATION SUBMERSIBLE PUMP



Owner's Manual

INTRODUCTION

Alpine Pumps are carefully inspected and tested to ensure both safety and operating performance. However, failure to follow the instructions and warnings in the manual may result in pump damage and/or serious injury. Be sure to read and save this manual for future reference.

WARNING:

- Risk of electric shock – This pump is supplied with grounding conductor and grounding type attachment plug. To reduce risk of electric shock, be certain that it is connected only to properly grounded, grounding-type receptacle.
- To reduce the risk of electric shock, use only on portable self-contained fountains no larger than 5 feet in any dimension.
- Risk of electric shock, do not remove cord and strain relief. Do not connect conduit to pump.
- This pump has been evaluated for use with WATER only.
- Reduce risk of shock during operation of this pump requires the provision of acceptable grounding.
- Risk of electric shock – This pump has not been investigated for use in swimming pool or marine areas.
- Do not connect to any voltage other than that shown on the pump.
- Always disconnect from electrical outlet before handling the pump.
- Don't operate without water.
- Operate pump completely submerged for proper cooling.

PERFORMANCE

A clogged or dirty intake screen will greatly reduce performance.

If the pump is used on a dirty surface, raise it slightly to reduce the amount of debris contacting the intake. If less flow is desired, adjust the flow control lever on the side of the pump or restrict the discharge flow.

Do not let the pump run when not submerged in water. Doing so may damage the pump. Always submerge the pump first, and then plug in the electrical outlet. At the beginning, it probably can't pump water, because there is air in the pump and the tube. Don't worry about it. Please pull out and insert electrical outlet several times, it will work very well at once.

The pump is to be supplied through a residual current device (RCD) with a rated residual operating current not exceeding 30mA.


MAINTENANCE

To clean the pump, remove the back cover and the impeller.

Use a small brush or stream of water to remove any debris CAUTION:

The pump shaft can not be removed. IF THE PUMP FAILS TO OPERATE, CHECK THE FOLLOWING:

- Check the circuit breaker and try another outlet to ensure the pump is getting electrical power. NOTE: Always disconnect from electrical outlet before handling the pump.
- Check the pump discharge and tubing for kinks and obstructions. Algae build up can be flushed out with a garden hose.
- Check the inlet to ensure it is not clogged with debris.
- Remove the pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
- Monthly maintenance will add to your pump's life. NOTE: Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop" This will prevent water from running down the cord into the electrical outlet.

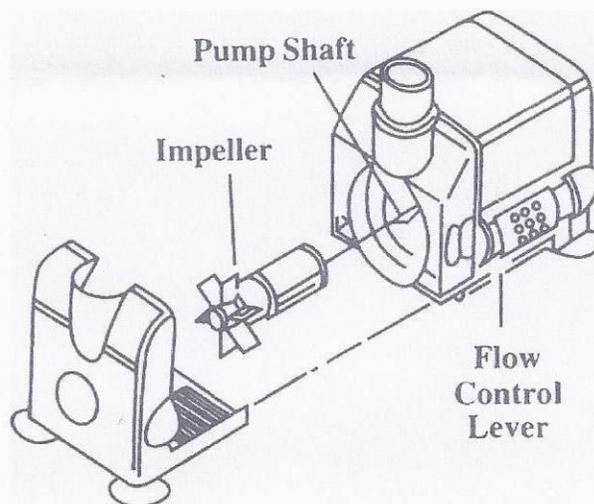

LIMITED WARRANTY

This product is guaranteed for a period of 12 months from date of purchase for material or manufacturing defects. Certificate of guarantee must be filled out completely by resale dealer and must accompany equipment along with the receipt, in case it is submitted for repair. Guarantee is considered void in case of improper use, not does it answer to damages caused by improper handling or negligence on the part of the buyer. All equipment must be sent postage paid.