

NAYER KAZEMI - WATER ART

NATURE BOWL # 105 © 1995

This handmade piece of "WATER ART" compliments any environment. It adds moisture to the air and brings nature's peace and tranquility into your life.

Dimensions: 12" x 5"

Material: Ceramic, Copper, Brass, Arizona Slate and Pebbles.

Finish: Black gloss glaze

Water Pump: See reverse side for detailed information

Assembly Instructions: (Indoor Fountain)

1. Insert copper tube (located in the middle of the brass rods) into the plastic tube connected to the pump.
2. Place brass bars on the ledges of the bowl.
3. Place the large Arizona Slate on the horizontal brass bars, place smaller pieces of slate on top and accent them with 2 or 3 small black pebbles (as shown in the picture).
4. Fill the bowl with water about 1" below the rim (distilled water is recommended).
5. Pump should already be pre-adjusted. See reverse for adjustment issues.
6. Hang copper wrapped pebbles to the right end of the brass bars that extend past the bowl.
7. By moving the slate rock you can change the sound of the water. The level of water also influences the sound, the fuller the bowl the softer the sound. (Always make sure you have water covering the pump, as it will burn out if there is not enough water)
8. Plug the cord into an electrical outlet, and turn on switch to enjoy your water art.


*** MAKE SURE YOUR SLATE PLATE IS INSIDE OF THE BOWL OTHERWISE WATER MAY POUR OUT OF THE BOWL.

TO PREVENT PUMP BURN-OUT KEEP WATER LEVEL ABOVE THE PUMP AT ALL TIMES.

Recommended Care:

Change the water every 2 or 3 weeks or as needed. To clean hard water deposits use a soft sponge, and a product like "Lime away", which is available in the cleaning aisles at most stores. **DO NOT ADD VINEGAR OR BLEACH TO THE WATER** it will eat the propeller in the pump, which is made of plastic.



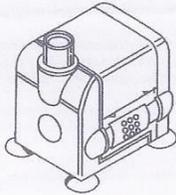

AlpineTM

CORPORATION
SUBMERSIBLE PUMP



Owner's Manual

INTRODUCTION

Alpine Pumps are carefully inspected and tested to ensure both safety and operating performance. However, failure to follow the instructions and warnings in the manual may result in pump damage and/or serious injury. Be sure to read and save this manual for future reference.

WARNING:

- Risk of electric shock – This pump is supplied with grounding conductor and grounding type attachment plug. To reduce risk of electric shock, be certain that it is connected only to properly grounded, grounding-type receptacle.
- To reduce the risk of electric shock, use only on portable self-contained fountains no larger than 5 feet in any dimension.
- Risk of electric shock, do not remove cord and strain relief. Do not connect conduit to pump.
- This pump has been evaluated for use with WATER only.
- Reduce risk of shock during operation of this pump requires the provision of acceptable grounding.
- Risk of electric shock – This pump has not been investigated for use in swimming pool or marine areas.
- Do not connect to any voltage other than that shown on the pump.
- Always disconnect from electrical outlet before handling the pump.
- Don't operate without water.
- Operate pump completely submerged for proper cooling.

PERFORMANCE

A clogged or dirty intake screen will greatly reduce performance.

If the pump is used on a dirty surface, raise it slightly to reduce the amount of debris contacting the intake. If less flow is desired, adjust the flow control lever on the side of the pump or restrict the discharge flow.

Do not let the pump run when not submerged in water. Doing so may damage the pump. Always submerge the pump first, and then plug in the electrical outlet. At the beginning, it probably can't pump water, because there is air in the pump and the tube. Don't worry about it. Please pull out and insert electrical outlet several times, it will work very well at once.

The pump is to be supplied through a residual current device (RCD) with a rated residual operating current not exceeding 30mA.


MAINTENANCE

To clean the pump, remove the back cover and the impeller.

Use a small brush or stream of water to remove any debris CAUTION:

The pump shaft can not be removed. IF THE PUMP FAILS TO OPERATE, CHECK THE FOLLOWING:

- Check the circuit breaker and try another outlet to ensure the pump is getting electrical power. NOTE: Always disconnect from electrical outlet before handling the pump.
- Check the pump discharge and tubing for kinks and obstructions. Algae build up can be flushed out with a garden hose.
- Check the inlet to ensure it is not clogged with debris.
- Remove the pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
- Monthly maintenance will add to your pump's life. NOTE: Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop" This will prevent water from running down the cord into the electrical outlet.

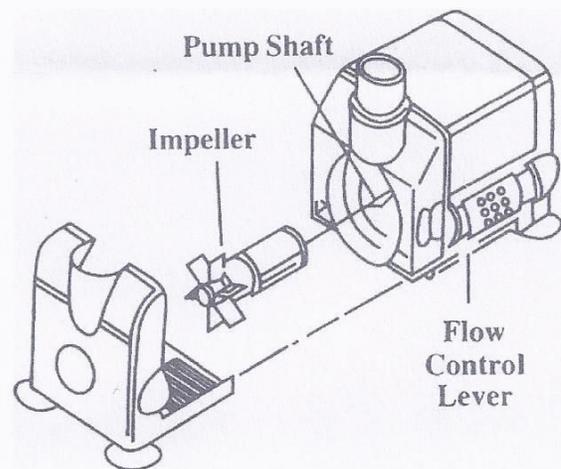

LIMITED WARRANTY

This product is guaranteed for a period of 12 months from date of purchase for material or manufacturing defects. Certificate of guarantee must be filled out completely by resale dealer and must accompany equipment along with the receipt, in case it is submitted for repair. Guarantee is considered void in case of improper use, not does it answer to damages caused by improper handling or negligence on the part of the buyer. All equipment must be sent postage paid.