

NAYER KAZEMI - WATER ART

Transparency & Water #801 © 2000

Dimensions: 21" x 9.5" x 5"

Material: Copper and glass

Finish: Flame Finish

Water Pump: See reverse side for detailed information.

Illustrated Assembly Instructions: (Indoor Fountain)



1. The pump is pre-adjusted and is already installed with frame, plastic tube and copper water spout.
2. Lift the water spout slightly up and turn it counter clockwise. Rest it on the top side (away to make room to insert glass into the frame but not removing it from the piece).



3. Insert the glass pairs into the copper frame one at a time to prevent breakage, taller glass (with weir attached) in back and shorter glass in front. Be sure that the textured sides face each other, smooth sides facing out; the texture will create a passageway for the water.



4. Insert into the basin, with the weir in the back. Turn the water spout back and place on top of the glass pairs, just over the weir. The clips will fit snugly around the copper glass frame.
5. To reduce the cleaning of the glass, distilled water (water without minerals or chemicals) is highly recommended. Filtered or reverse osmosis water take chemicals out of the water, but not the minerals. Fill the basin with distilled water about 1.5" below the front opening. The water level in the basin determines the sound of the piece. For a softer sound add more water.
6. Place the lid on top of the piece. Plug in the electrical cord, turn the cord switch on and enjoy your "Water Art".




TO PREVENT PUMP BURN-OUT KEEP WATER LEVEL ABOVE THE PUMP AT ALL TIMES.

Recommended Care:

- Change the water at least once a month. Be sure to reverse the directions to clean the piece.
- To clean the glass use WINDEX or LIME-AWAY with a soft sponge.
- **NEVER ADD VINEGAR OR BLEACH TO THE WATER** it will eat the parts in the pump, which is made of plastic.



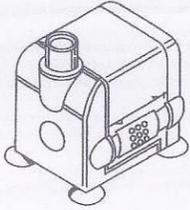

Alpine™ CORPORATION SUBMERSIBLE PUMP



Owner's Manual

INTRODUCTION

Alpine Pumps are carefully inspected and tested to ensure both safety and operating performance. However, failure to follow the instructions and warnings in the manual may result in pump damage and/or serious injury. Be sure to read and save this manual for future reference.

WARNING:

- Risk of electric shock – This pump is supplied with grounding conductor and grounding type attachment plug. To reduce risk of electric shock, be certain that it is connected only to properly grounded, grounding-type receptacle.
- To reduce the risk of electric shock, use only on portable self-contained fountains no larger than 5 feet in any dimension.
- Risk of electric shock, do not remove cord and strain relief. Do not connect conduit to pump.
- This pump has been evaluated for use with WATER only.
- Reduce risk of shock during operation of this pump requires the provision of acceptable grounding.
- Risk of electric shock – This pump has not been investigated for use in swimming pool or marine areas.
- Do not connect to any voltage other than that shown on the pump.
- Always disconnect from electrical outlet before handling the pump.
- Don't operate without water.
- Operate pump completely submerged for proper cooling.

PERFORMANCE

A clogged or dirty intake screen will greatly reduce performance.

If the pump is used on a dirty surface, raise it slightly to reduce the amount of debris contacting the intake. If less flow is desired, adjust the flow control lever on the side of the pump or restrict the discharge flow.

Do not let the pump run when not submerged in water. Doing so may damage the pump. Always submerge the pump first, and then plug in the electrical outlet. At the beginning, it probably can't pump water, because there is air in the pump and the tube. Don't worry about it. Please pull out and insert electrical outlet several times, it will work very well at once.

The pump is to be supplied through a residual current device (RCD) with a rated residual operating current not exceeding 30mA.


MAINTENANCE

To clean the pump, remove the back cover and the impeller.

Use a small brush or stream of water to remove any debris CAUTION:

The pump shaft can not be removed. IF THE PUMP FAILS TO OPERATE, CHECK THE FOLLOWING:

- Check the circuit breaker and try another outlet to ensure the pump is getting electrical power. NOTE: Always disconnect from electrical outlet before handling the pump.
- Check the pump discharge and tubing for kinks and obstructions. Algae build up can be flushed out with a garden hose.
- Check the inlet to ensure it is not clogged with debris.
- Remove the pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
- Monthly maintenance will add to your pump's life. NOTE: Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop" This will prevent water from running down the cord into the electrical outlet.

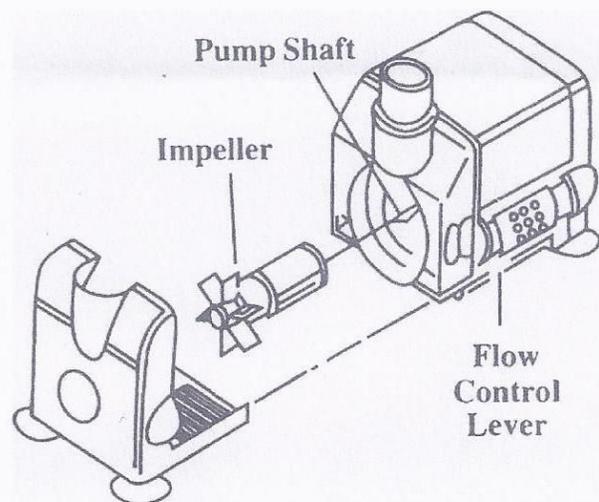

LIMITED WARRANTY

This product is guaranteed for a period of 12 months from date of purchase for material or manufacturing defects. Certificate of guarantee must be filled out completely by resale dealer and must accompany equipment along with the receipt, in case it is submitted for repair. Guarantee is considered void in case of improper use, not does it answer to damages caused by improper handling or negligence on the part of the buyer. All equipment must be sent postage paid.